

DIESEL AIR COMPRESSOR PUMPS & EQUIPMENT

Diesel Air Compressor

PART NO: PLI-DPAC-ES

Electric Start

SPARE PARTS

1	Piston Air Compressor	7	Pressure Relief
2	Pull Start	8	12 Volt Battery
3	10HP Diesel Engine	9	Donaldson Air Filtration Unit
4	Quick Air Connectors	10	Air Receiver Pressure Gauge
5	Filter Regulator	11	Unloader Valve
6	Spark Arrestor		

Lifting Point

Filtered air induction system

Electric start

1

Air compressor oil filter

3

2

Compressor oil level indicator

Bolt the compressor down here

Filtered
air
induction
system

4

5

6

7

45 litre air receiver

8

Receiver drain

9

10

11